

MXLR

MXLR Caster CHECK:

Print this file on A4 format paper without size reduction.
To make sure the size isn't reduced check the length of the line below.
It should be exact 50mm (5cm) long.



The below scale can be cut out to check if your setup system shows the correct caster.
To make it useable for multiple stations to check, each line is longer than needed.
Cut the scale to your needs/length and compare.
Make sure to use the MIDDLE of the wheel axis hole as start point for your measurement!

BLACK line = MIDDLE 0" line
BLUE lines = 2" steps
RED lines = 10" steps

